



**INTELLIGENT ADDRESSABLE
MANUAL CALL POINT
INSTALLATION AND OPERATION MANUAL**

Product Safety

To prevent severe injury and loss of life or property, read the instructions carefully before installing the manual call point to ensure proper and safe operation of the system.



European Union directive

2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points.

For more information please visit the website at www.recyclethis.info

EN54 Part 11 Compliance

NFA-T01CP Intelligent Addressable Manual Call Point complies with the requirements of EN 54-11:2001 + A1:2005.



EN54 Standard Conformity Information



EN54-11
1330g/01

NORDEN COMMUNICATION UK LTD
Unit 10 Baker Close, Oakwood Business Park
Clacton-On- Sea, Essex
POST CODE:CO15 4BD
NFA-T01CP

EN 54-11:2001 + A1:2005

Table of Content

1	Introduction.....	4
1.1	Overview.....	4
1.2	Feature and Benefits.....	4
1.3	Technical Specification.....	4
2	Installation.....	5
2.1	Installation Preparation.....	5
2.2	Installation and Wiring.....	5
3	Manual Call Point Configuration.....	6
3.1	Preparation.....	6
3.2	Addressing.....	6
3.3	Read Configuration.....	7
4	General Maintenance.....	7
4.1	Resetting Manual Call Point.....	7
5	Troubleshooting Guide.....	8
Appendix 1.....		8
	Limitation of Heat Detectors.....	8

1. Introduction

1.1. Overview

The NFA-T01CP Intelligent Manual Call point features a durable, non-breakable glass. When pressed with light pressure, it triggers the call point into an alarm condition. An LED indicator is conveniently mounted on the front face to help locate the activated call point. It's safe to press, eliminating the need for a hammer. Additionally, a protected flap on the lower part allows for reset using a supplied special tool.

In case of a fire, pressing the NFA-T01CP Intelligent Manual Call point activates the LED indicator, signaling the call point status. Simultaneously, it sends a communication signal to the fire alarm control panel. This manual call point is compatible with the NFA-T04FP Intelligent Addressable Fire Alarm Control Panel, and it is ensuring seamless addressable communication compatibility.

1.2. Feature and Benefits

- EN54-11 Compliance
- Using microprocessor technology
- Digital addressing
- Non-breakable glass and hammerless
- Safe to operate and easy to reset
- Surface mounted, indoor application

1.3. Technical Specification

• Listed	LPCB Certification
• Compliance	EN 54-11:2001 + A1:2005
• Input Voltage	24VDC [16V to 28V]
• Current Consumption Standby	0.6mA, Alarm: 1.8mA
• Protocol/Addressing	Norden, Value range from 1 to 254
• Indicator	Single LED / Steady On-when pressed
• Material / Colour	Fireproof ABS / RED Glossy finishing
• Dimension	89 mm x 93 mm x 35 mm
• Weight	102g (with Base), 80g (without Base)
• Class	Type A, Indoors
• Operating Temperature	-10°C to +55°C
• Ingress Protection Rating	IP43 (Not LPCB Approved)
• Humidity	0 to 95% Relative Humidity, Noncondensing


2. Installation

2.1. Installation Preparation


This manual call point must be installed, commissioned and maintained by a qualified or factory trained service personnel. The installation must be installed in compliance with all local codes having a jurisdiction in your area or BS 5839 Part 1 and EN54.

2.2. Installation and Wiring

1. Follow the arrow mark for the correct position. Do not over-tighten the screws otherwise the base will twist. Use two M4 standard screws.
2. Connect the wire in terminal as shown in Figure two [2]. Verify the device number using programming tool then stick on the label before attaching call point. The sticker labels are available on the control panel.
3. Align the call point and tabs and gently push the call point until it locks into place.



Top view

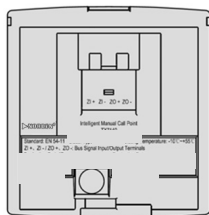

Label

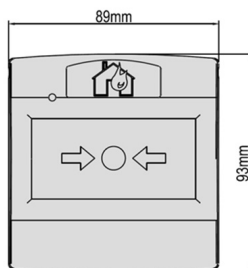


Figure 1

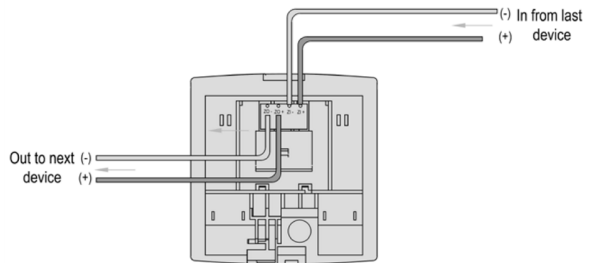


Figure 2

Terminal Description

- ZI + Signal In (+)
- ZO+ Signal Out (+)
- ZI- Signal In (-) ZO-Signal Out (-)

3.Manual Call Point Configuration

3.1.Preparation

The NFA-T01PT Programming Tool is used to configure manual call point soft address. This tool is not included, must be purchased separately. The programming tool is packed with twin 1.5V AA battery and cable, ready for usage once received.

Program a unique address number for each device according to the project layout before placing from the Terminal Base.

Warning: Disconnect the loop connection whilst connecting to the programming tool.

3.2.Addressing

1. Connect the programming cable to ZI+ and ZI-(or ZO+ and ZO-) terminals (Figure 3). Press **“Power”** to switch on the unit.
2. Switch-on the Programming Tool, then press button **“Write”** or number **“2”** to enter Write Address mode (Figure 4).
3. Input the desired device address value from 1 to 254, and then press **“Write”** to save the new address (Figure 5).

Note: If display **“Success”**, means the entered address is confirmed. If display **“Fail”**, means failure to program the address (Figure 6).

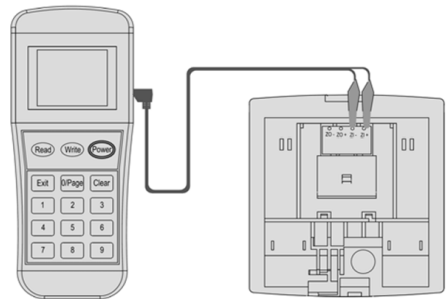


Figure 3

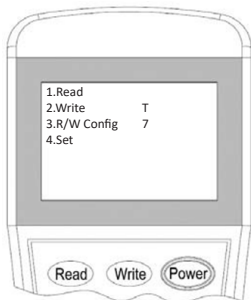


Figure 4



Figure 5



Figure 6

4. Press **“Exit”** key to go back Main Menu. Press **“Power”** key to switch-off the programming tool.

3.3. Read Configuration

1. Attach the programming cable to ZI+ and ZI-(or ZO+ and ZO-) terminals of manual call point. Press **“Power”** to switch on the unit.
2. Switch-on the programming tool, then press button **“Read”** or **“1”** to enter Read mode (Figure 7). The programming tool will display the configuration after a few seconds (Figure 8).
3. Press **“Exit”** key to go back to the Main Menu. Press **“Power”** key to switch off the programming tool.

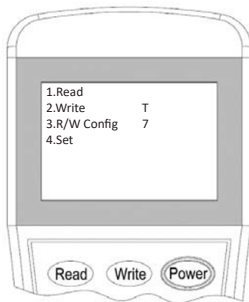


Figure 7

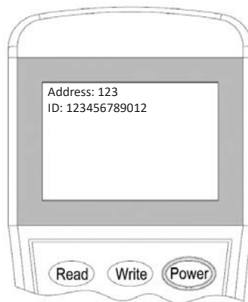


Figure 8

Read Description

Address: Unique number assigned
ID: Device serial number

4. General Maintenance

1. Inform the suitable personnel before conducting the maintenance.
2. Disable the manual call point on the control panel to prevent false alarm.
3. Do not attempt to adjust or modify the manual call point, it may affect the ability of the device to respond to a fire condition and will void the manufacturer’s warranty.
4. Use a damp cloth to clean the call point.
5. Notify again proper personnel after conducting the maintenance and make sure to enable the manual call point and confirm if up and running.
6. Perform the maintenance semi-annually or quarterly depending on the site conditions.

4.1. Resetting Manual Call Point

1. Ensure the fire is cleared before resetting the call point.
2. Open the protected flap and insert the supplied reset key into the keyhole. (Figure 9).
3. Rotate the key clockwise position up to 90-degree angle (Figure 10). then forcibly push the key inside until the glass plate completely return to its normal position. (Figure 11)

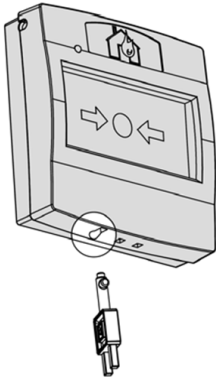


Figure 9

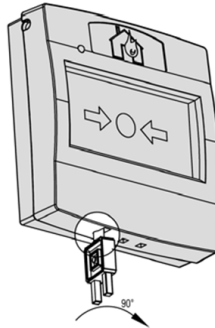


Figure 10

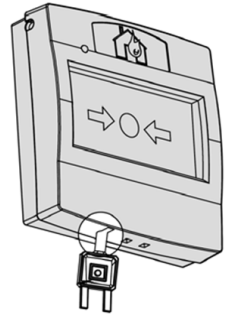


Figure 11

5.Troubleshooting Guide

What you notice	What it means	What to do
Address not enrolling	The wiring is loose The address is duplicate	Conduct maintenance Re-Commission the call point
Unable to commission	The damage is in the electronic circuit	Replace the call point unit
No alarm when pressed	The damage is in the mechanical part	Replace the call point unit

Appendix 1

Limitation of Manual Call Point

The manual call point cannot last forever. To keep the call point working in good condition, please maintain the equipment continuously according to recommendations from manufacturers and relative nation codes and laws. Take specific maintenance measures on the basis of different environments.

This device contains electronic parts. Even though it is made to last for a long period of time, any of these parts could fail at any time. Therefore, test your manual call point weekly, different one once a week or least every half-year according to national codes or laws. Any manual call points, fire alarm devices or any other components of the system must be repaired and/or replaced immediately as they fail.



Norden Communication UK Ltd.

Unit 10 Baker Close, Oakwood Business Park

Clacton-On- Sea, Essex

POST CODE:CO15 4BD

Tel : +44 (0) 2045405070 | E-mail : salesuk@norden.co.uk

www.nordencommunication.com